

FRONT FENDER


Removal/Installation

1. Park the ATV on level ground and set the parking brake.
2. Remove the side covers and fuel tank cover assembly as described in this chapter.
3. Remove the front carrier and front bumper as described in this chapter.
4. On FE/TE models, remove the front mud guards as described in this chapter.
5. Detach the wire retaining band.
6. Disconnect the headlight connector (A, **Figure 14**) and accessory socket connector (B).

NOTE

To unlock the connector, depress the tab on the front of the connector using a thin-blade screwdriver.

7. Remove the self-tapping screw under the fender on both sides (**Figure 15**).
8. On FM/TM models, remove the socket bolt securing each side of the fender to the lower brace (**Figure 16**).
9. On FM/TM models, remove the retaining clips at the front of the mud guard (**Figure 17**, typical).
10. Remove the front fender mounting bolts.
11. Spread the front fender around the steering shaft and remove the front fender.
12. Remove the inner fender mounting bolt (A, **Figure 18**) and remove each inner fender (B).
13. Remove the mud guard brace mounting bolt (C, **Figure 18**) and remove the guard braces.

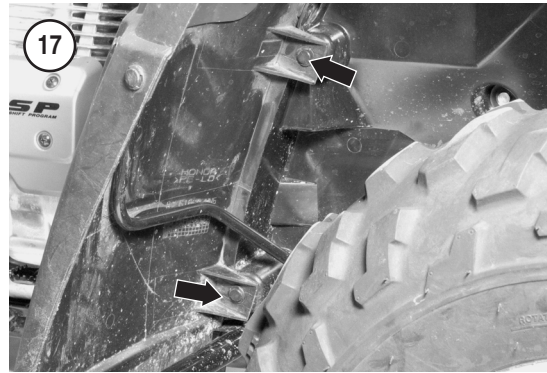


14. Reverse the removal steps to install the front fender.

HEADLIGHT GRILL

Removal/Installation



1. Remove the headlight housings as described in the *Headlight Lens* section in Chapter Nine.
2. Remove the mounting screws and retaining clips.
3. Remove the headlight grill.
4. Reverse the removal procedure to install the headlight grill.

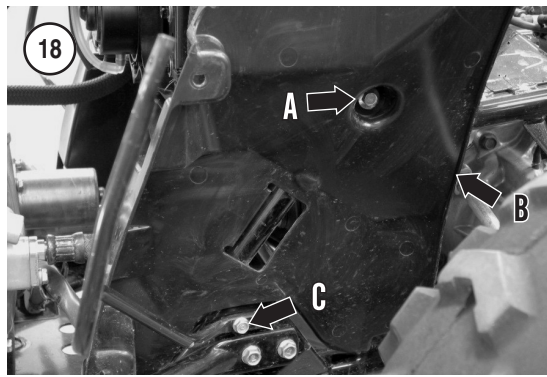

REAR CARRIER

Removal/Installation

1. Park the ATV on level ground and set the parking brake.
2. Remove the bolts (A, **Figure 19**) securing the rear fender to the carrier on each side.
3. Remove the bolts (B, **Figure 19**) securing the rear carrier to the frame on each side.
4. Remove the rear carrier (**Figure 20**).
5. Install the rear carrier by reversing the preceding removal steps.

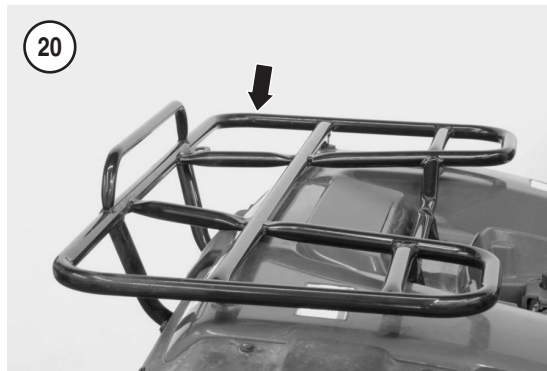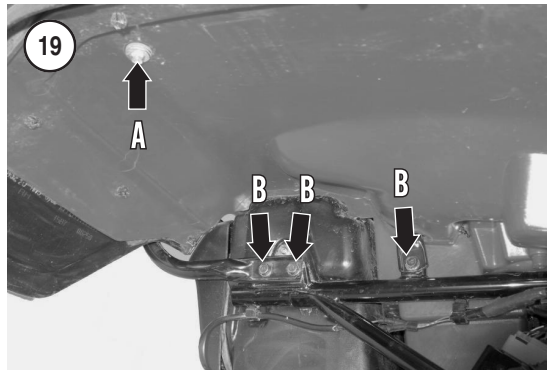

REAR FENDER

Removal/Installation

1. Park the ATV on level ground and set the parking brake.
2. Remove the rear carrier as described in this chapter.
3. Remove the battery (Chapter Three).

Copyright of Honda TRX350 RANCHER, 2000-2006 is the property of Penton Media, Inc. ("Clymer") and its content may not be copied or emailed to multiple sites or posted to a listserv without the copyright holder's express written permission. However, users may print, download, or email articles for individual use.